



Callow End Village Hall Projector

The projector and the sound system is powered on and ready for use.

Accessing the Remote Controls:

The Remote Controls for the projector and the Screen are stored in the small key box to the right of the audio visual equipment cupboard on the left of the fireplace.

The combination access code is available to hall hirers on request.

Please return the remotes to the key box after use.

Turning On:

The projector will be on stand-by. The Projector Remote Control to switch it on.

The screen control receiver box may need to be powered on. The receiver is on the wall on the right hand side of the screen near to the Emergency Exit Double Doors. There is a mains switch below the receiver.

Connecting to the Projector:

There are two ways to connect to the projector:

- HDMI socket on the trunking below the audio visual equipment cabinet;
- Wirelessly from your computer, tablet, phone or similar device

Selecting Video Source:

Use the Projector Remote Control to select the source that you want to use. There is a button labelled Source. Press button to rotate between available sources.

HDMI – Use the Digital Link source

Wireless Connection – HDMI1 source – then follow on screen instructions.

Speaker Selection:

Use the rotary switch to choose the output speakers.

Volume Control:

Adjust the volume on your device (phone, tablet, laptop, etc).

Hirer Provided Equipment:

Hirers will need to provide their own equipment to connect to the projector, including HDMI cable (if needed), laptop/tablet/phone and mains extension cable (if needed).

Contact Us:

If you need any more information, please get in touch using the email

info@callowendvillagehall.co.uk

With Thanks:

We gratefully acknowledge Coda Audio for their generous donation of the sound system, and the Clive Richards Foundation, Rural Reels, Councillor Tom Wells (Worcestershire County Council Ward Budget), and Powick Parish Council for grants that have enabled the purchase of the projector.